PROBLEM: WASHER WON'T SPIN/AGITATE

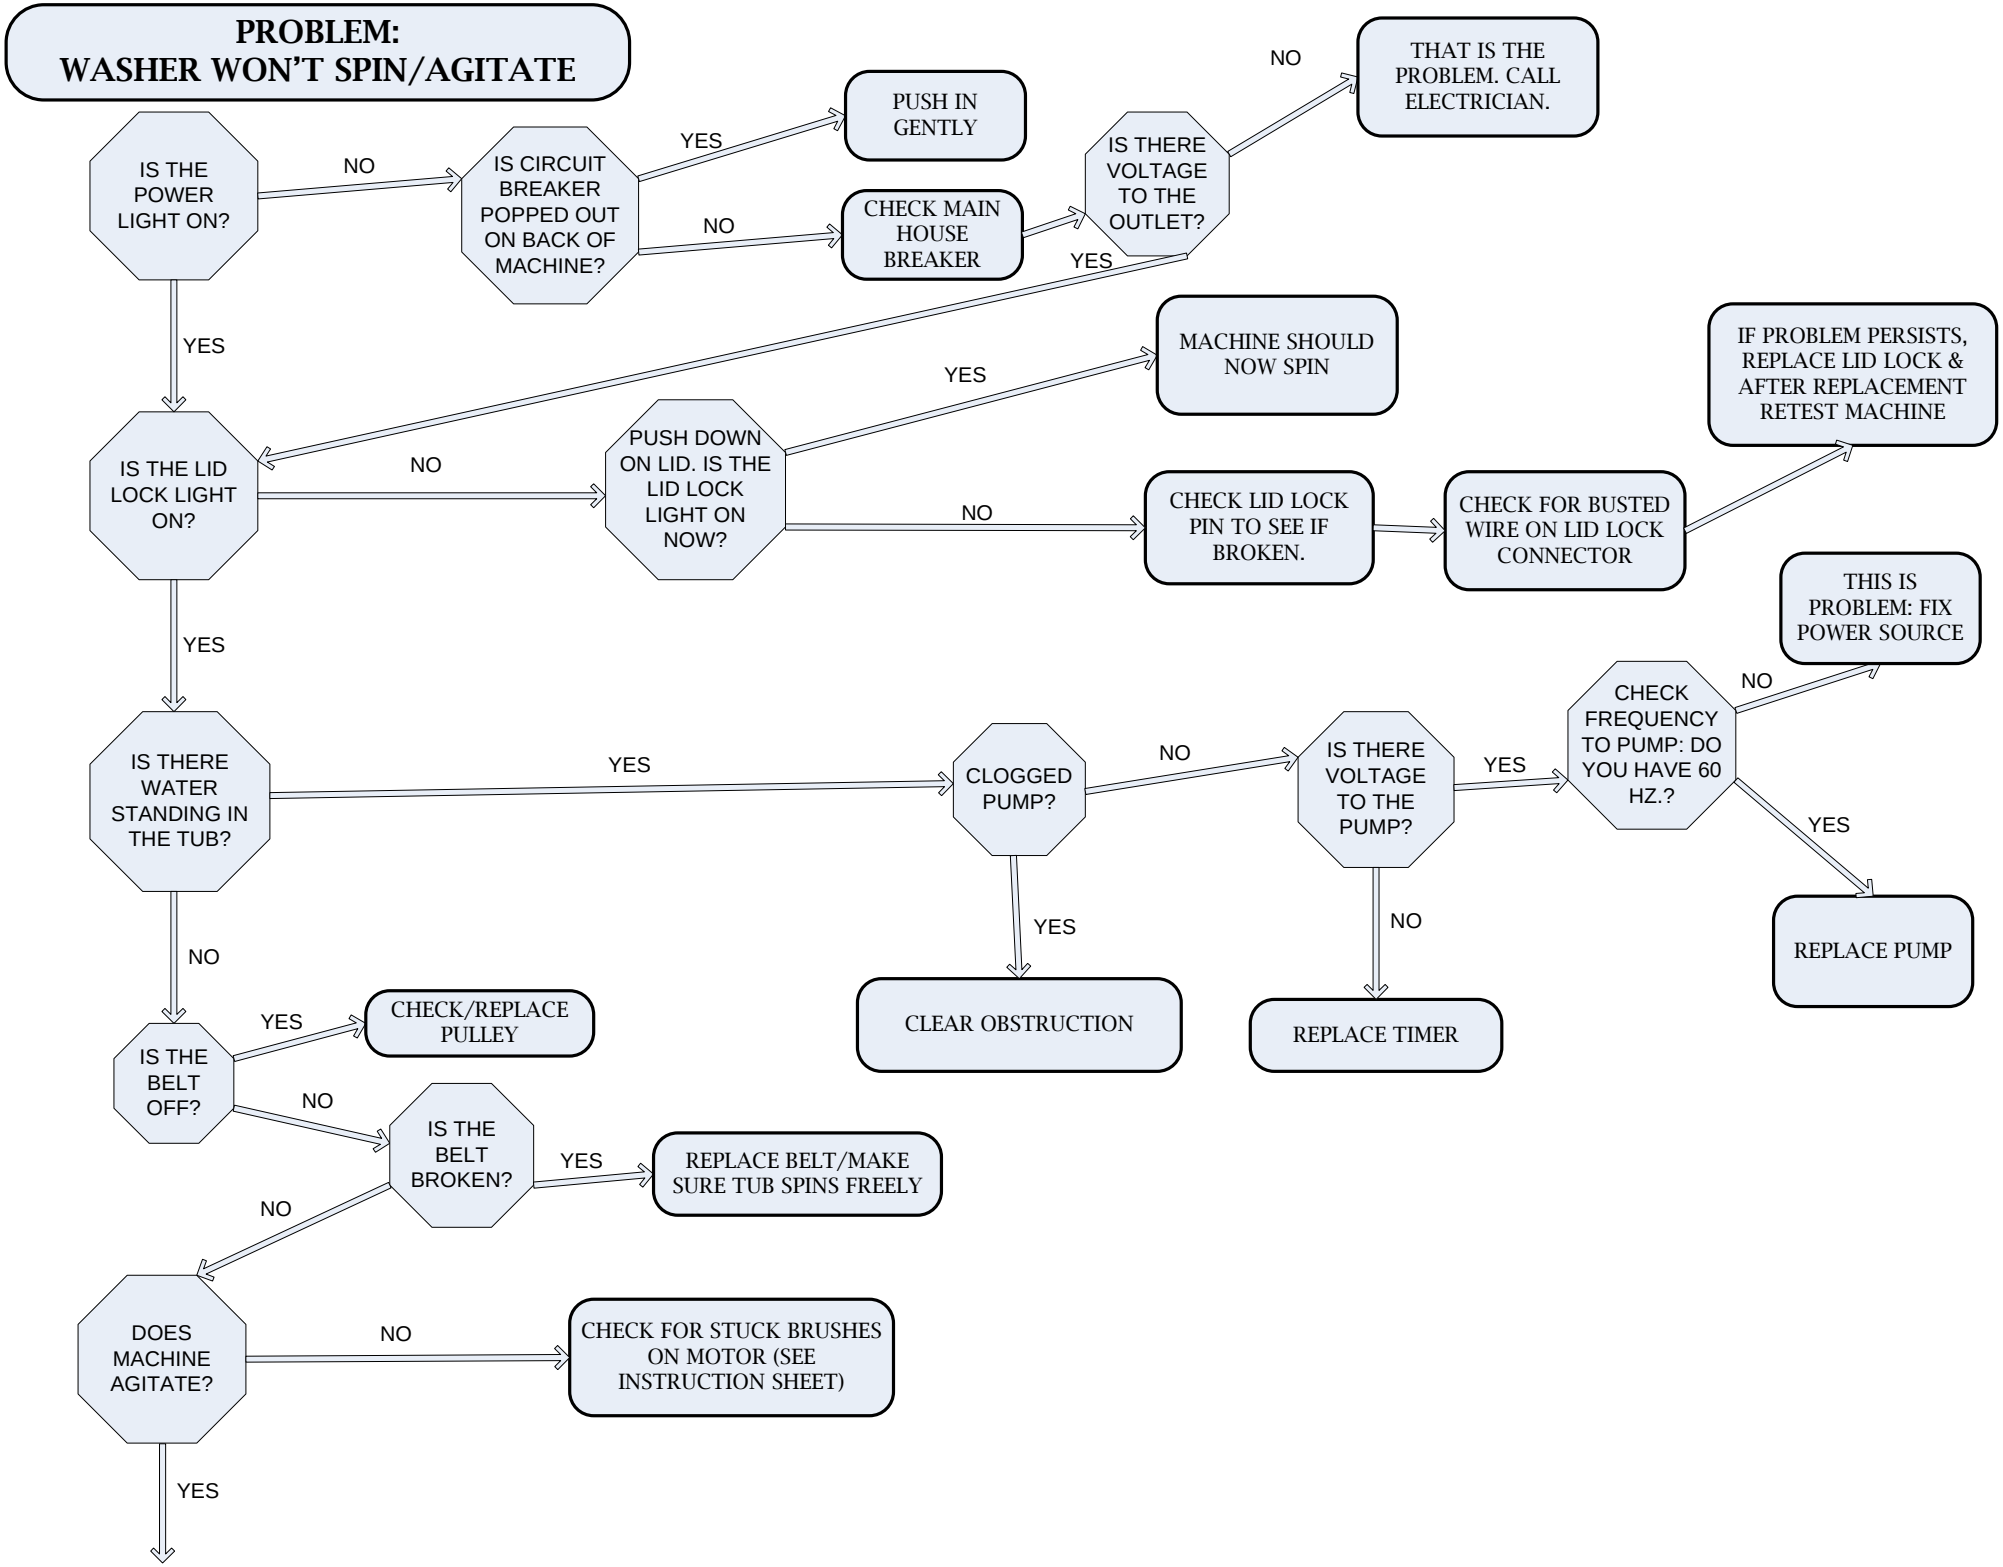

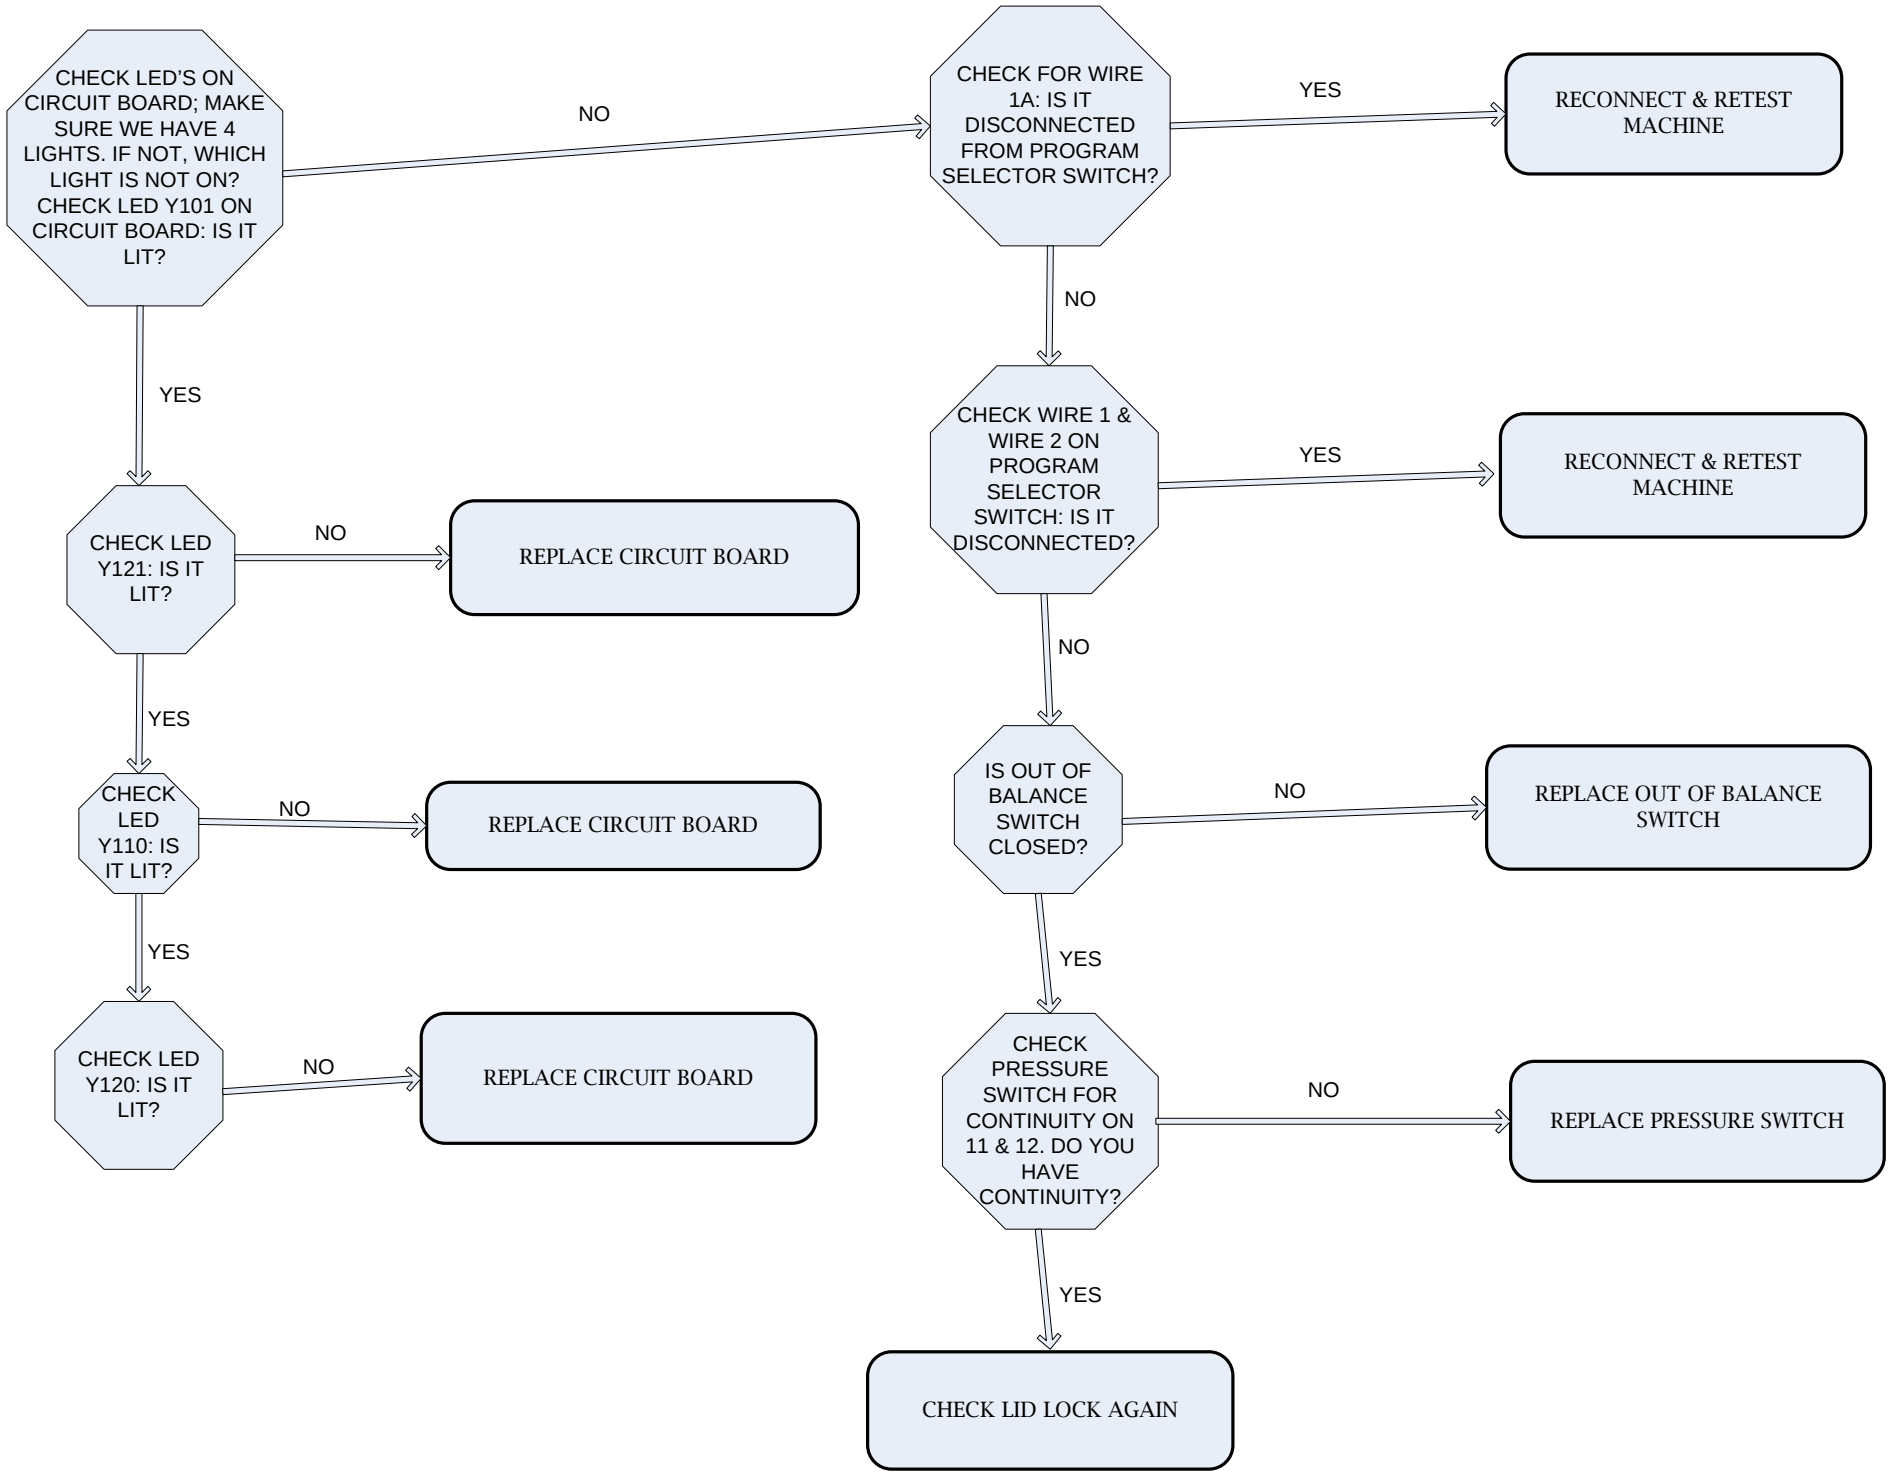
CHECK LED'S ON CIRCUIT BOARD; MAKE SURE WE HAVE 4 LIGHTS. IF NOT, WHICH LIGHT IS NOT ON? CHECK LED Y101 ON CIRCUIT BOARD: IS IT LIT?
NO
YES
CHECK LED Y121: IS IT LIT?
NO
REPLACE CIRCUIT BOARD
YES
CHECK LED Y110: IS IT LIT?
NO
REPLACE CIRCUIT BOARD
YES
CHECK LED Y120: IS IT LIT?
NO
REPLACE CIRCUIT BOARD
CHECK FOR WIRE 1A: IS IT DISCONNECTED FROM PROGRAM SELECTOR SWITCH?
YES
RECONNECT & RETEST MACHINE
NO
CHECK WIRE 1 & WIRE 2 ON PROGRAM SELECTOR SWITCH: IS IT DISCONNECTED?
YES
RECONNECT & RETEST MACHINE
NO
IS OUT OF BALANCE SWITCH CLOSED?
NO
REPLACE OUT OF BALANCE SWITCH
YES
CHECK PRESSURE SWITCH FOR CONTINUITY ON 11 & 12. DO YOU HAVE CONTINUITY?
NO
REPLACE PRESSURE SWITCH
YES
CHECK LID LOCK AGAIN