



REPLACING A MECHANICAL TIMER

1. Unplug machine.
2. Using a Philips screwdriver, remove the six screws on the control panel.
3. Push timer knob in, gently pull control panel forward, and pull black pin on back of timer out about a half an inch (see Figure 1).

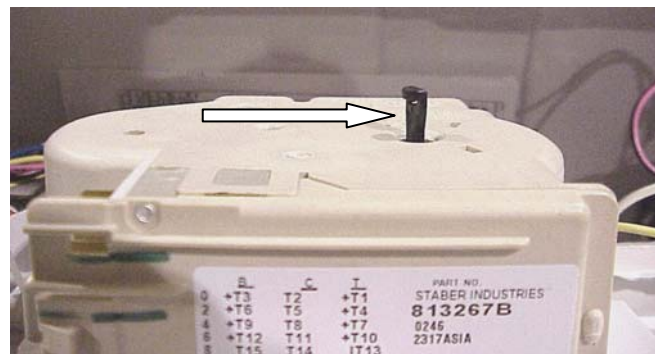


Figure 1

4. After pulling the black pin out, this will allow you to remove the large knob, disk, and small spacer off the front of control panel.
5. Remove the plastic wire tie around the wire harness connected to the timer (see Figure 2).

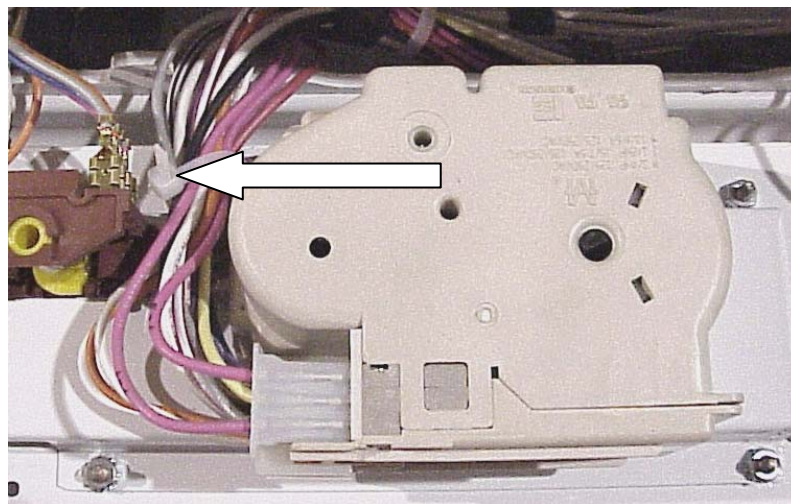


Figure 2

- Lift up gently on plastic tab to remove wire harness plug (see Figure 3).

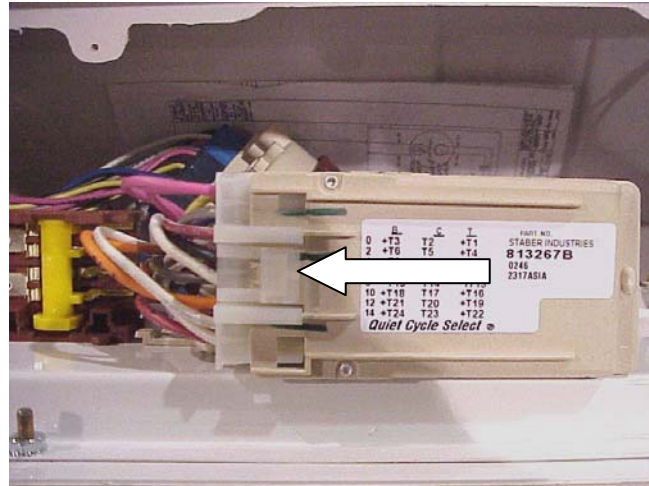


Figure 3

- Remove screw (see Figure 4), lift tab, then slide timer to the left to remove.

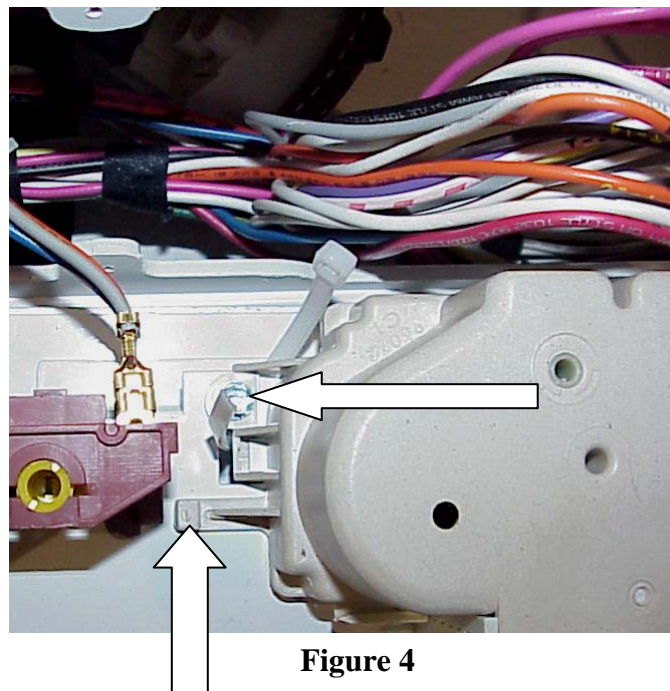


Figure 4

- Reverse procedure to install new timer. When it is time to put the knob on, put the knob on while making sure the black pin on the back of the timer is pushed in all the way until you hear it 'click' into place. This will keep you from being able to pull the knob off.