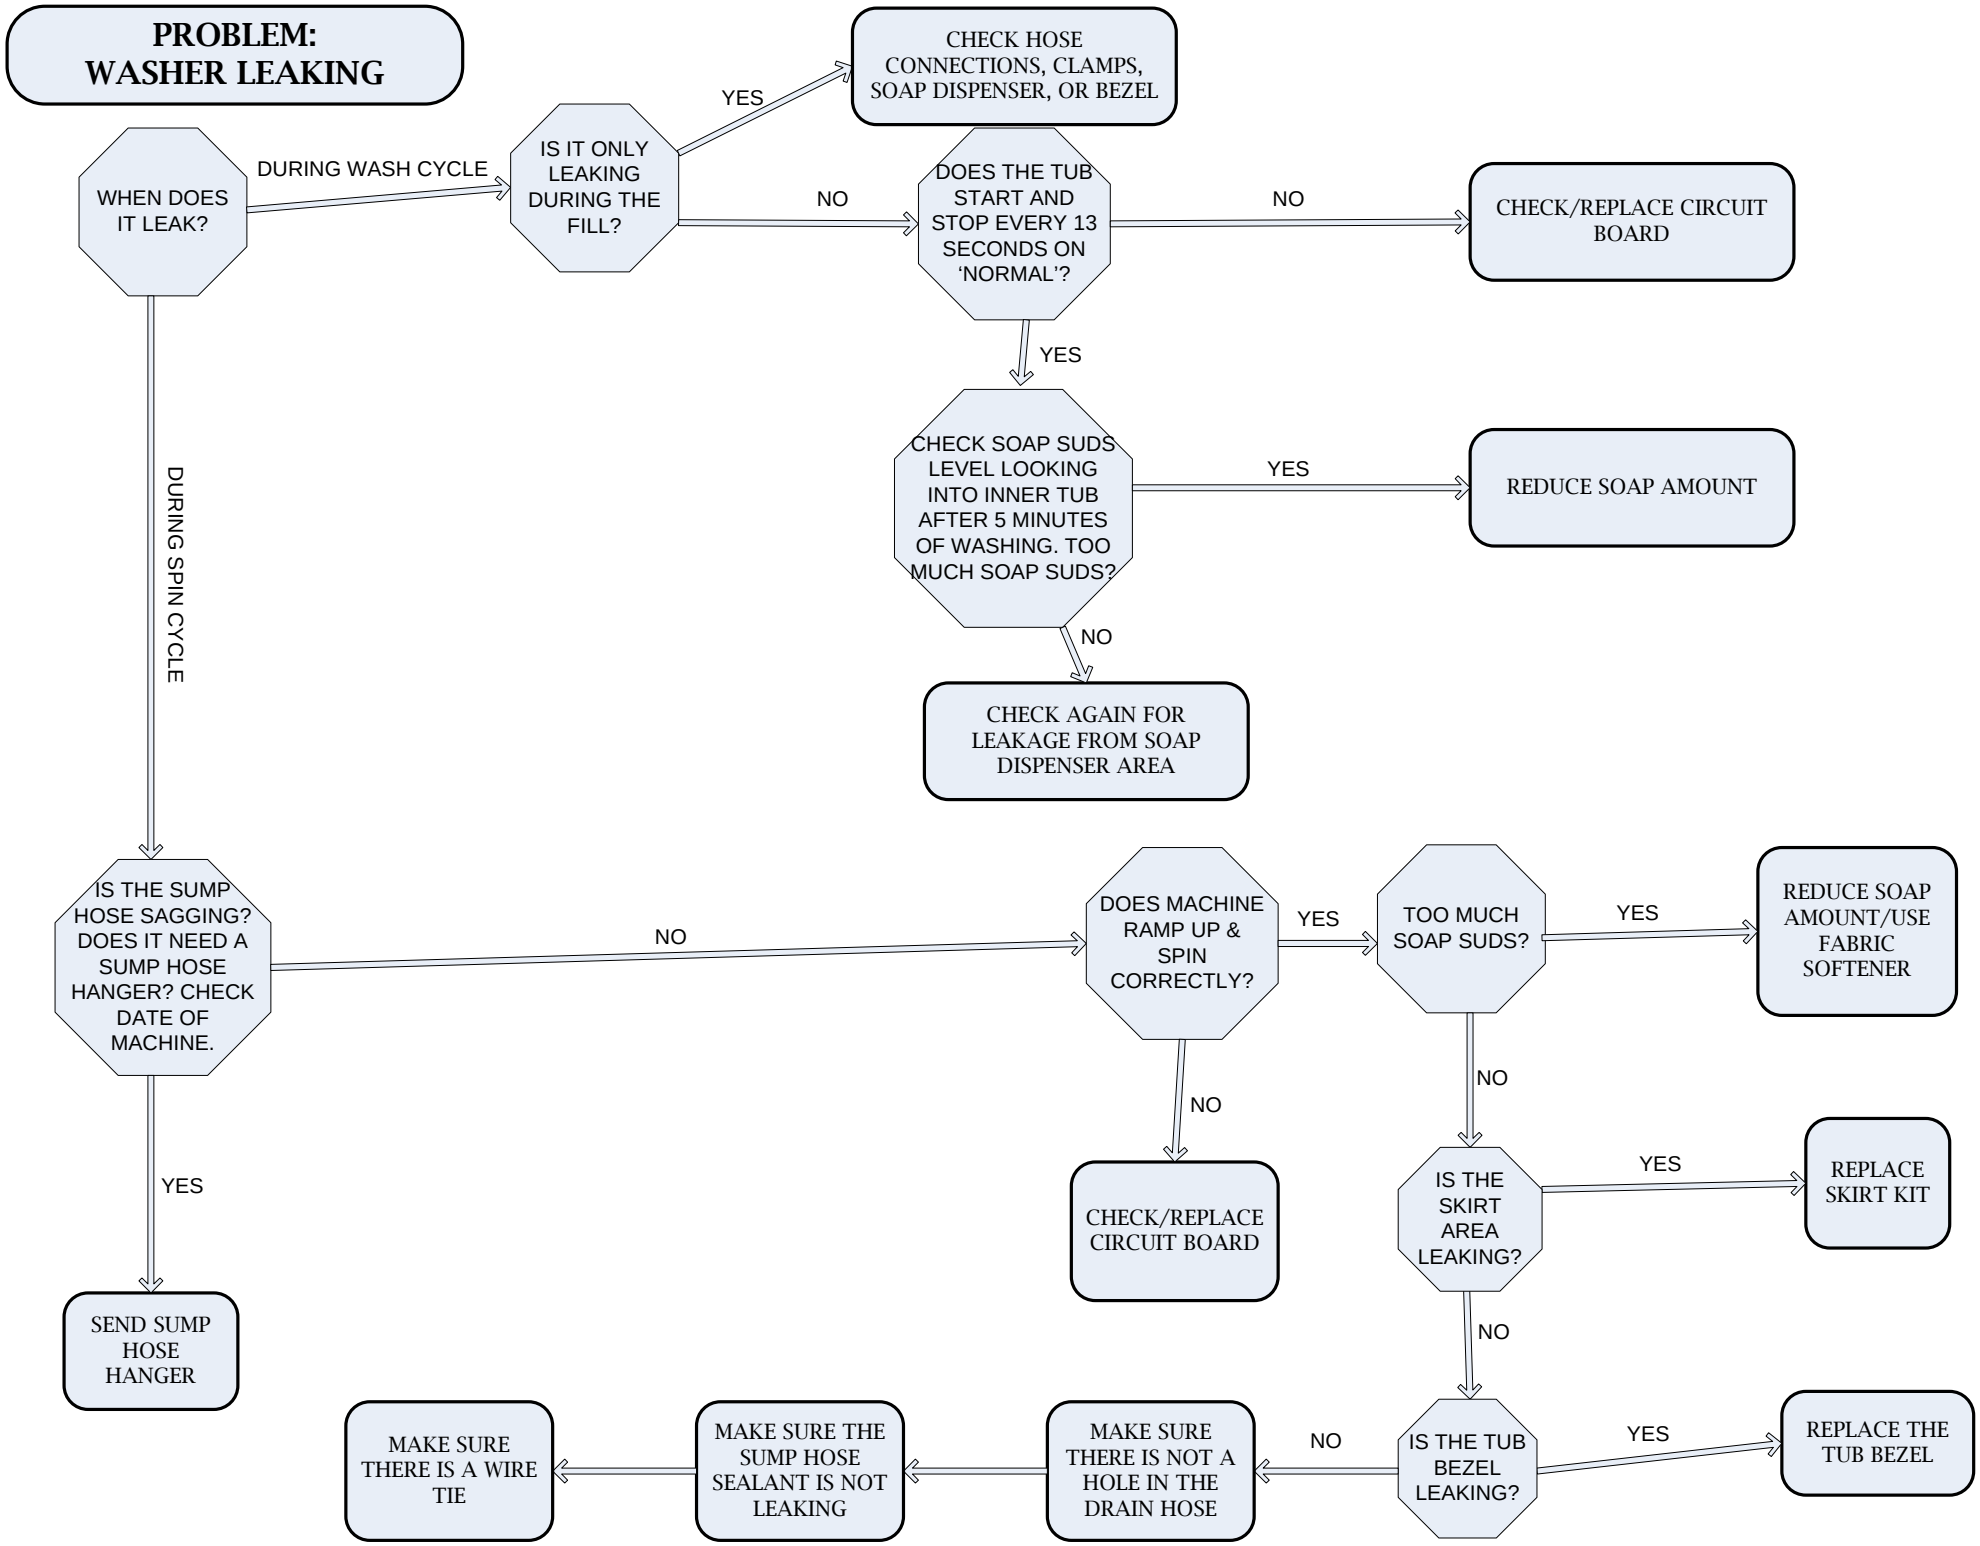
PROBLEM:
WASHER LEAKING
WHEN DOES IT LEAK?
DURING WASH CYCLE
IS IT ONLY LEAKING DURING THE FILL?
YES
CHECK HOSE CONNECTIONS, CLAMPS, SOAP DISPENSER, OR BEZEL
NO
DOES THE TUB START AND STOP EVERY 13 SECONDS ON 'NORMAL'?
NO
CHECK/REPLACE CIRCUIT BOARD
YES
CHECK SOAP SUDS LEVEL LOOKING INTO INNER TUB AFTER 5 MINUTES OF WASHING. TOO MUCH SOAP SUDS?
YES
REDUCE SOAP AMOUNT
NO
CHECK AGAIN FOR LEAKAGE FROM SOAP DISPENSER AREA
DURING SPIN CYCLE
IS THE SUMP HOSE SAGGING? DOES IT NEED A SUMP HOSE HANGER? CHECK DATE OF MACHINE.
NO
DOES MACHINE RAMP UP & SPIN CORRECTLY?
YES
TOO MUCH SOAP SUDS?
YES
REDUCE SOAP AMOUNT/USE FABRIC SOFTENER
NO
CHECK/REPLACE CIRCUIT BOARD
NO
IS THE SKIRT AREA LEAKING?
YES
REPLACE SKIRT KIT
YES
SEND SUMP HOSE HANGER
NO
IS THE TUB BEZEL LEAKING?
YES
REPLACE THE TUB BEZEL
NO
MAKE SURE THERE IS NOT A HOLE IN THE DRAIN HOSE
MAKE SURE THE SUMP HOSE SEALANT IS NOT LEAKING
MAKE SURE THERE IS A WIRE TIE